



ATEP
ITALIA

ATEP ITALIA srl
Via Vanzago 20
25030 Paratico (BS) ITALY
+39 035 91 33 44
info@atep.it

C.F. e P.IVA 01694380161
Cap.Soc. Euro 30.600,00
Numero REA BS - 575313

SINCE 1986

CONFORTABLE ERGONOMIC MARINE EQUIPMENT


ISTRUZIONI PROGRAMMAZIONE ED USO RADIOCOMANDO A 2 CANALI 433.92MHZ

INSTRUCTION MANUAL FOR PROGRAMMING AND USING OF RADIO CONTROL UNIT AT 2 CHANNELS 433,92MHZ

CARATTERISTICHE TECNICHE / TECHNICAL SPECS:

Alimentazione	12-24 Vac/Vdc
Corrente assorbita	20mA tipica, max. 50mA
Numero relè	2
Configurazione relè	Bistabile, Impulsivo, Timer minuti e Timer secondi
Modulo radio	433.92-868 MHz
Numero max. di codici memorizzabili	40
Dimensioni box	53x76x24 mm
Temperatura di esercizio	-20 °C / +70 °C

MORSETTIERA / TERMINAL BLOCK:

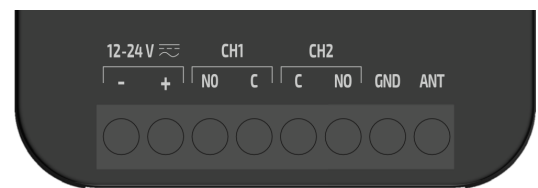

PROCEDURA DI REGISTRAZIONE / RECORDING PROCEDURE:

- **PREMERE IL TASTO "P" DEL RICEVITORE PER SELEZIONARE IL RELÈ1, IL LED L1 INIZIERÀ A LAMPEGGIARE. PER PASSARE AL RELÈ2, PREMERE NUOVAMENTE IL TASTO "P" ED IL LED L2 INIZIERÀ A LAMPEGGIARE.**
 - **DOPO AVER SELEZIONATO IL RELÈ DESIDERATO, PREMERE IL TASTO DEL RADIOCOMANDO CHE SI VUOLE REGISTRARE E TENERLO PREMUTO FINO A QUANDO IL LED DEL RELÈ SELEZIONATO RIMARRÀ ACCESO FISSO PER POI EMETTERE 2 LAMPEGGI**
 - **RIPETERE LA MEDESIMA SEQUENZA SELEZIONANDO IL RELÈ NON ANCORA CONFIGURATO**
-
- **PRESS THE "P" BUTTON ON THE RECEIVER TO SELECT RELAY 1, THE L1 LED WILL START TO FLASH. TO SWITCH TO RELAY 2, PRESS THE "P" BUTTON AGAIN AND THE L2 LED WILL START TO FLASH.**
 - **AFTER SELECTING THE DESIRED RELAY, PRESS THE BUTTON ON THE REMOTE CONTROL THAT YOU WANT TO REGISTER AND HOLD IT DOWN UNTIL THE LED OF THE SELECTED RELAY REMAINS PERMANENTLY ON AND THEN FLASHES TWICE**
 - **REPEAT THE SAME SEQUENCE BY SELECTING THE RELAY THAT HAS NOT YET BEEN CONFIGURED**

PROCEDURA DI CANCELLAZIONE RADIOCOMANDI / ERASING OF REMOTE CONTROLLERS:

QUESTA FUNZIONE PERMETTE DI ELIMINARE SINGOLARMENTE I TELECOMANDI PRECEDENTEMENTE MEMORIZZATI

- **PREMERE IL TASTO "P" DEL RICEVITORE, IL LED L1 INCOMINCERÀ A LAMPEGGIARE, QUINDI PREMERE IL TASTO "S"**
 - **I LED L1 ED L2 SI ACCENDONO FISSI**
 - **PREMERE E MANTENERE PREMUTO IL TASTO DEL TELECOMANDO CHE SI VUOLE ELIMINARE FINO ALLO SPEGNIMENTO DEI DUE LED DEL RICEVITORE**
 - **RIPETERE LA MEDESIMA SEQUENZA PER TUTTI I TASTI CHE SI VOGLIONO ELIMINARE**
-

THIS FUNCTION ALLOWS TO INDIVIDUALLY DELETE PREVIOUSLY MEMORIZED REMOTE CONTROLS

- **PRESS THE "P" BUTTON ON THE RECEIVER, THE L1 LED WILL START FLASHING, THEN PRESS THE "S" BUTTON**
 - **THE L1 AND L2 LEDS WILL LIGHT UP STEADILY**
- **PRESS AND HOLD THE BUTTON ON THE REMOTE CONTROL TO DELETE UNTIL THE TWO LEDS ON THE RECEIVER TURN OFF**
 - **REPEAT THE SAME SEQUENCE FOR ALL THE BUTTONS TO BE DELETED**



**Batteria TX / TX Battery:
1x12V - A23**

E' POSSIBILE SCANSIONARE IL QR CODE APPLICATO SUL RETRO DEL TELECOMANDO PER VISITARE LA NOSTRA PAGINA WEB DOVE SI PUO' SCARICARE IL PDF DELLE ISTRUZIONI DI PROGRAMMAZIONE

YOU MAY SCAN THE QR CODE APPLIED ON THE BACK OF THE TX TO VISIT OUR WEB PAGE AND DOWNLOAD THE PDF FORMAT OF THE INSTRUCTION MANUAL

